



# Video Doorbell

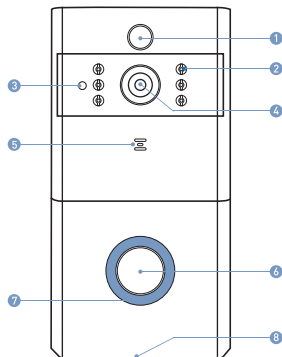


1. PIR Motion Sensor
2. Infrared LED x 6
3. Light Sensor
4. 166° HD Camera

5. Microphone
6. Push Button
7. LED Indicator
8. Speaker

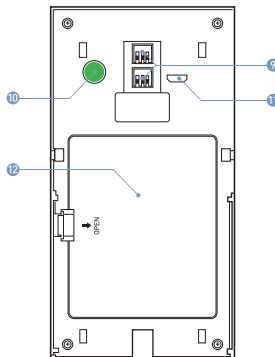

9. AC 8V~24V Power Interface
10. Reset Button
11. Micro USB Port (Battery Charging)
12. Battery door


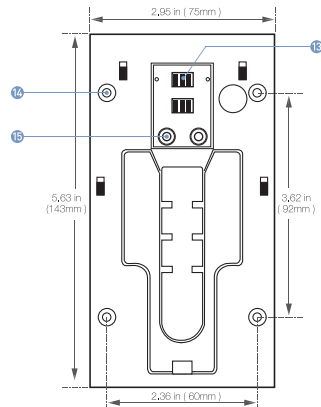


13. Power Contact Base
14. Mounting Screw Holes \*4
15. Wire Terminals

## Hardwiring

---


Connect the wires coming out of your wall to the screws on the back of your EKEN Doorbell. Please make sure the red wire can only connect to the left screw and the other wire can only connect to the right screw.

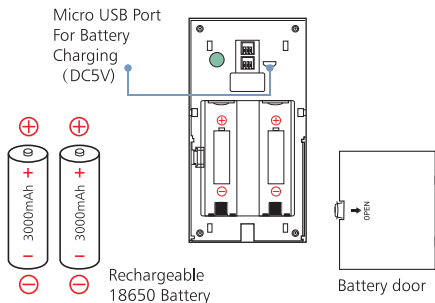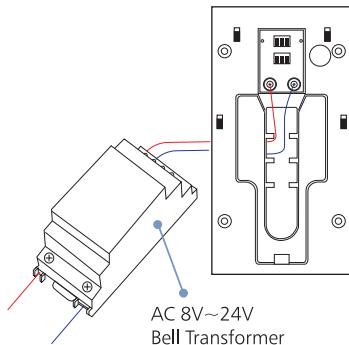


## Or Battery Power

---

Fully charge the 18650 batteries before use. After charging, remove the battery door from the Video Doorbell, insert the batteries, and push into place. Two 18650 batteries (6000mAh) will last 6-8 months before needing to be recharged.

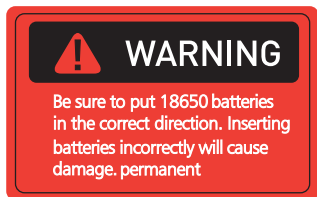

Rechargeable  
18650 Battery

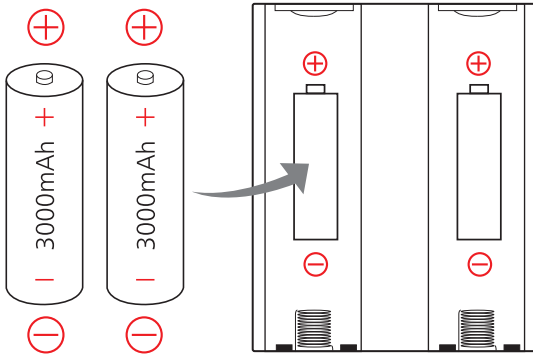

ToSee

### Set Up Your Video Doorbell In The Tosee App


Download the ToSee app  
The ToSee app will walk you through setting up and remotely controlling your EKEN Doorbell. Search for "ToSee" on the Apple app store or Google Play.



iOS




Android

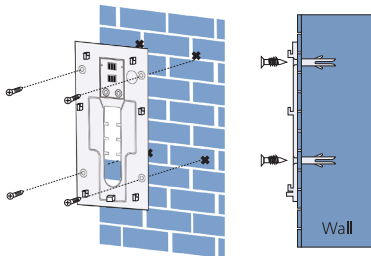


## Install Your Video Doorbell On The Wall


Mark 4 drill holes and use a bit to drill holes in your wall and insert the anchors. Secure your EKEN Doorbell on the wall 4 mounting screws and 1 security screw.

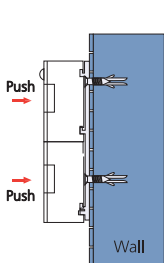

Step 1

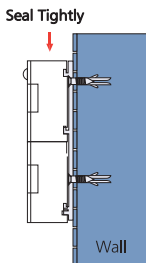

Step 2

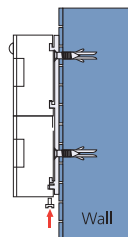

Tighten The Screw


Step 3

## App Live View Interface




1. Volume
2. Playback
3. Video effects
4. Full screen
5. Screenshot
6. Talk to visitors
7. Record
8. Share
9. Settings
10. Back
11. Battery

## Settings

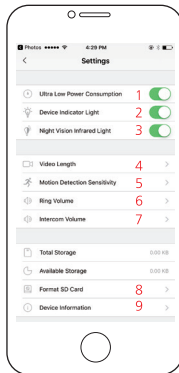



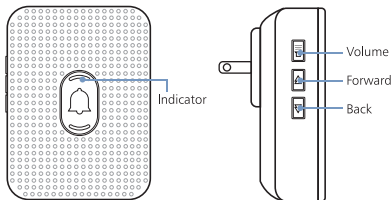






1. Ultra Low Power Consumption
2. Device Indicator Light
3. Night Vision Infrared Light
4. Video Length
5. Motion Detection Sensitivity
6. Ring Volume
7. Intercom Volume
8. Format SD Card
9. Device Information



## EKEN Wireless Chime (Optional)

Connect the EKEN video doorbell to the EKEN doorbell chime, and get instant alert in your home when someone rings the doorbell. Hear the doorbell chime when you are home, without checking your video doorbell app! The EKEN chime plugs into any wall outlet, you can place it anywhere in the home.

### In The Box

					
EKEN Video doorbell	Mounting bracket	5 Mounting screws	2 Hardwire screws	Security screw	5 Anchors
					
Hex key	User manual	2 Batteries (Optional)			