

1080P HD Trail and Hunt camera

User Manual

T01



Please go to wansview website: <http://www.wansview.com> for the latest instructions.

EN Version Updated on 10 October 2018

Introduction

Thank you for choosing this camera. The camera is specially used to record activities of wild animals. For your easier use of it, the user manual contains full specifications of operation. Please read carefully the manual before using, and keep it at a safe place for your future reference.

The compilation of the user manual refers to the latest information. The manual quotes captured screen displays and graphics, with the aim to introduce the digital camera through detailed and direct methods. Due to the differences of technical R&D and production batch, those captured screen displays and graphics indicated in the manual may be different from that of actual digital camera.

Important Safeguards or Warnings

In case of a newly purchased memory card for the first time use, or data available in the memory card unrecognized for the camera or image captured by other cameras, please firstly format the memory card;

- Before plugging in or out the memory card, please firstly disconnect power supply of the camera;
- After using for many times, performance of the memory card will be lowered. In case of lowered performance, a new memory card is needed to purchase;
- The memory card is a precise electronic device. Please don't bend it and keep it away from falling or heavy load;
- Don't keep the memory card in the environment with strong electromagnetic or magnetic field, like the place near speaker or receiver of TV;
- Don't use or keep the memory card in environment with over high or low temperature;
- Keep the memory card clean and away from contacting liquid. In case of contacting liquid, please dry it with soft cloth;
- In case of keeping the memory card idle, place it into the card sleeve;
- Please note that the memory card will get hot after long-term use, which is normal;
- Don't use the memory card having been used on other digital cameras. If still want to use this memory card, please format it with the camera.
- Don't use the memory card having been formatted on other camera or card reader;



- In case of one of the followings with the memory card, the recorded data may be damaged:
 - Improper use of the memory card;
 - Disconnect power supply or take the memory card out during recording, deleting (formatting) or reading;

What's in the Box

- | | |
|-------------------|------------------------|
| .1X Trail Camera | .1X Connector |
| .1X Mounting Belt | .3X Screws |
| .1X USB Cable | .3X Expansion Screws |
| .1X Mount | .1X Instruction Manual |

Areas of application

- . Camera trap for hunting
- . Animal or incident observation
- . Motion triggered security camera for domestic, office or public use
- . Any internal and external surveillance, where evidence of an infringement has to be provided.

Camera Overview





- . The LCD display screen only lights on in the SETUP mode, or when changing menu settings or viewing existing photos in ON mode.
- . Using the operating buttons, menu settings can be changed in the test mode or existing photos can be played back.
- . A Micro SD memory card (not included) must have been inserted into the memory card slot in order to save photos and videos.
- . To download photos and videos, connect the camera to a computer via the mini USB cable.
- . There are 3 modes, which could be switched by the mode button.
- . 8x LR6(AA) batteries (not included) are needed to power the camera.
- . An external power supply can be provided via the DC connection (input 6V, at least 1.5A. Mains adapter is not included)


Steps to Use the Camera

1 Open and close the camera

To open the camera, undo the two lateral locking brackets as shown in Fig. 1.

To lock the camera again, engage metal hoops of locking brackets into mount and press down plastic tab of bracket(Fig.2).

A fixing for a padlock is provided between the two locking brackets, allowing the camera to be securely locked.

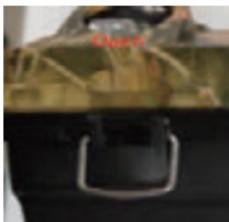

2 Insert batteries

- . Open the camera to inset the batteries. The battery compartment is housed in the right, rear part of the camera.
- . Now open the protective cover of the battery compartment by pulling the clamping closure at the top slightly inwards before lifting off the cover.



- . Insert 8 fully batteries as shown in the below figure.
- Ensure correct position as marked for each battery in the battery compartment when inserting batteries.
- . Close the battery compartment again with the protective cover.



Note:

- Instead of type LR6(AA) batteries, rechargeable batteries with the same specification(with 2000mAh or higher) may be used. We recommend NiMh batteries with low self discharge(not included)
- There will be an alarm if the battery is low in power.



3 Insert memory card

In order to save photos and videos, you must insert a Micro SD memory card to the slot before turning on the camera.


Note:

Micro SD memory card up to 32GB are supported. Insert the memory card as shown in the illustration.

Push the memory card into compartment until it clicks into place.



If the camera displays" Card protected", remove the memory card and change the position of the memory protection

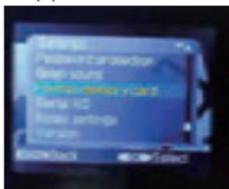

4 External Power Supply

The camera can be powered with an external power supply(not included). A 6V power supply (with a connector) $\geq 1.5A$, together with a 3.5mm external and 1.35mm internal diameter connector is required.




Note:

Rechargeable batteries cannot be recharged in the camera with an external power supply. Remove any existing batteries from the battery compartment when the camera powered with an external power supply.

INSTALL THE CAMERA WITH A STRAP

Use the included securing strap to attach the camera to a tree or other object.

The illustrations below demonstrate how to fasten the securing strap.

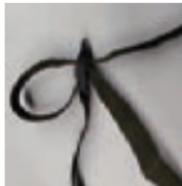

Position your camera desired and pull the loose end of the securing strap tight until the camera is firmly secured. To release the securing strap again, pull at the tab of the securing strap.

Using the camera

Prior to setting up the camera for surveillance, it must be set up for the respective purpose. For this purpose, there is a setup mode available. In addition to changing settings, photos and videos can be taken and existing photos can be viewed in this mode.

1 Mode switch

Open the camera, the mode switch is located at the bottom edge on the right inside. 3 modes can be selected.

OFF: The camera is completely switched off in the OFF mode.

SETUP: Select SETUP mode to adjust settings and make or playback photos and videos.

ON: The camera is activated to take photos automatically.



2 Operating buttons

Set the mode switch to SETUP and the camera and monitor are switched on, operating buttons can be activated and settings can be changed.



3 Functions of operating buttons in recording mode:

When the camera is in recording mode as shown in the picture.

By pressing  button can do below operations:

. **Mode:** Photo, Video, Photo+Video

Select whether photos or videos should be taken when motion is detected. When in the “Photo+Video” mode, the camera first takes a set number of photos prior to recording a video.

. **Photo resolution:** 12MP, 8MP, 5MP, 3MP, 1MP

Select the desired resolution for photos. A higher resolution produces a somewhat better photo quality but results in larger files requiring more space on the memory card.

. **Photo series:** 1 photo, 2 photos, 3 photos

Select the number of photos to be taken in succession when the camera is triggered in the Photo mode. Please also observe the parameter interval!

. **Video resolution:** 1920x1080P, 1280x720P, 720x480P, 640x480P, 320x240P

Select the required video resolution. A higher resolution produces higher quality videos but results in larger files requiring more space on the memory card. Videos are recorded in AVI format which can be played back on most video equipment.

. **Video length:** The video length is optional between 1-60 seconds or 1-10 minutes.

The longer the recording time selected, the shorter the standby time is. The default video length is 5 seconds.



. **Audio Recording:** ON, OFF

Select ON, the video taken will have audio when played back.

. **Shot lag:** 30 seconds, optional from 5 seconds to 60 minutes

Select the shortest period for the camera to wait before it reacts to the successive triggering of the main sensor after an animal has first been detected. The camera does not record any images or videos during the selected interval. This prevents the memory card from being filled with unnecessary shots.

. **Side motion sensor:** ON, OFF

Select "On" to enable PIR motion function

Select "Off" to disable PIR motion function

. **Sensitivity motion sensors**

The sensitivity of the main motion sensor is set here. For interior areas and environments with little interference, select "High". Select "Medium" for exterior areas and environment with a normal amount of interference, and select "Low" for environment with a high level of interference.

. **Target recording time**

Press "MENU" to find "Target recording time". Press "OK", and then select "ON" to set the starting working and ending working time. After finishing setting, the camera only works during the set time every day. Beyond the period, the camera is in standby.

. **Time lapse: On/off**

When "On" has been selected, the camera automatically takes photos or videos in the selected time interval, irrespective of whether or not the PIR sensor has detected a motion or not. Select "On" to set the time interval, and set the values of Hr, Min and Sec. For example, if the process of flowers blooming has to be recorded, time lapse can be used. The camera automatically take pictures in every set time intervals.

. **Language:** Select the desired menu language

The following languages are available: English, Deutsch, Dansk, Somali, Svenska, Espanol, Francais, Italiano, Nederlands, Portugues, Japanese, Chinese.

. Time & Date

Set the time and date according to current time. Press Left/Right key to choose the number and change the value by pressing Up/Down key. Confirm the changes with OK key.

Time format: 12/24 hr

Date format: dd/mm/yyyy, yyyy/mm/dd, mm/dd/yyyy

. Photo Stamp: On/off (only available for photos, not for videos)

Select "ON" to print the date, time, temperature and moon phase on each photo. Otherwise select "off".

. Password Protection

After selecting "On" enter a four digit password to protect your camera against unauthorized access. Press "OK", and then select "ON" to set the password of the camera. The password is a 4-digit number selected between 0-9. If the password is lost, turn off the camera to OFF position, then press MENU and REPLAY key at the same time, and slide the operating mode selector switch from OFF to SETUP position. The camera is unlocked.

. Beep Sound: Turn beep sound on/off

Select "On", it will sound beep when pressing the button.

Select "Off", it doesn't sound beep when pressing the button.

. Format memory card:

All files are deleted by formatting the memory card. Press "OK" button and confirm formatting by selecting "Yes".

We recommend formatting the memory card if it has already been used in other devices or if it is a new card.

Caution: Ensure that files still required have been backed up prior to formatting!

. Serial NO.:Off/On (can only be used for photos not for videos)

Select "On" to assign a serial number to the camera. As soon as "On" has been confirmed by pressing the OK button, the individual serial number can be inserted. The serial number is 4-digit number selected between 0-9.

. Reset Settings:

All settings will be deleted if select “Yes”.

.Version: Check trail camera’s model name and firmware

By pressing  button to start the replay mode, please refer to **4. Functions of operating buttons in replay mode for more operations.**

By pressing  button to change to manual recording mode for video recording, press **SHOT** button to start and end video recording.

By pressing  button to change to manual recording mode for taking photos, press **SHOT** button to take picture.

OK,<> : No function in recording mode.

4 Functions of operating buttons in replay mode

When the camera is in replay mode as shown in the picture .

By pressing  button can do below operations:



. Delete current file

You can use this function to delete individual recordings from the memory card. Press **MENU** key under the mode playback, move the select bar to “Delete current file” and press “**OK**” to delete the selected recording.

. Delete all files

You can use this function to delete all recordings from the memory card. Press **MENU** key under the mode of playback, move the selection bar to “Delete all files” and press **OK** to delete all recordings.

. Activate slide show

-This function can be used to playback the photos stored on the memory card automatically. Each photo is shown for about 2 seconds. To stop the slide show and keep the current image permanently on the screen, press the OK button.

. Write protect

-This function can be used to protect individual recordings of all saved recordings from accidental deletion.

-Select "Write-protect current file" to protect the currently selected recording from accidental deletion.

-Select "Write-protect all files" to protect all saved recordings from accidental deletion.

-Select "Unlock current file" to remove the write protection for the currently selected recording.

-Select "Unlock all files" to remove the write protection for all saved recordings.

By pressing button  to return to the recording mode.

By pressing button  to view existing pictures and videos backwards, press "Ok" to play video.

By pressing button  to view existing pictures and videos forwards, press "Ok" to play video.

By pressing button  to zoom in photo in increments(up to 8 times) , press OK button to zoom out photo, press MENU can return to original size.

The buttons  /  no function in replay mode.

5 Aligning the camera

In test mode you can work out the optimum exposure angle and range of the motion sensor. During alignment consider whether the use of the side motion sensor may be useful for attaining the desired observation results.

Align the camera as follows:

Fasten the camera to a tree or similar object at a height of 1-2 meters and align the camera in the desired direction. Then move slowly from one side of the target area to the other side.

While doing this, monitor the motion display.

-If it lights up in red, you have been detected by the motion sensor. In this case, you can work out the best alignment for the camera.

-The motion display only lights up when operating mode selector switch is in the SETUP position and one of the motion sensors has detected movement. During normal operation, there will be no LED display in this area.

-To ensure that the camera doesn't make unwanted recordings of irrelevant movements, it should not be set up in a sunny location or close to branches. The detecting range of the sensors is 110°. And the recording angle of the camera is about 100 degree.

6 Normal working mode

Slide the operating mode selector from **SETUP** to **ON** position, after 5 seconds, the LED of motion display will go off and it will go into standby mode.

In this mode, the camera only takes pictures or records video when an alarm is triggered by objects. As soon as any wild animals or similar object enter the detecting range of the side motion sensors, the camera will be activated and detect the motion. If the wild animals keeps moving to the detecting range of the central sensor zone, the camera will start capturing photos and/or send videos (depending on the configuration).

-After the wild animal moves out of the detecting range of side motion sensors, the camera switches off and goes back into standby mode.

7 Night working mode

-During night exposures the infrared LEDs on the front of the camera provide the required light for taking pictures. The range of the LEDs makes the camera starting shooting, you have been detected by one of the activated side motion pictures within 3m-20m. However, reflective objects can cause overexposure.

-Please note that pictures taken in night exposures are black and white. When recording video for a long time, the low voltage may have great influence on the stability of the camera. So in case of the low voltage, it is better not to record in the evening.

Note:

When using the camera at night, the electric current would increase because of the working of infrared lamps. If the camera is in low battery, it would not shoot photos or filming videos at night. Meanwhile once daylight is available, the camera works normally even in low battery.

8 Play the videos and pictures saved on memory card via TV and computer.

. TV connection :

The camera can transfer the video signal to an external monitor or the video input of a television set. Please also follow the instructions of the respective playback device.

-Turn on your TV, connect the TV with the camera through 3.5mm cable

-Turn on the camera, and slide the operating mode selector to "SETUP"

-After connecting, the camera enters the mode of playback and the LCD turns off, the camera recordings would be shown on the TV.

. Computer connection:

The Trail Camera can be connected to a computer using the supplied USB cable to view existing photos/videos.

1.Connect the camera to your computer using the USB cable.

2.The camera switches on automatically in the USB mode, irrespective of the selection on the mode switch.

3.The camera installs itself on the computer as an additional drive under the name "Removable storage device".

4.Double click on the device to detect the folder "DCIM".

5.The photos and videos are located in the sub folders of the "DCIM" folder.

6.You can copy or move photo and vide files on the computer.

Alternatively you can insert the memory card in a card reader on the computer.

Note:

Mac computers shown as "Unknown" drive on the desktop. When clicking on the drive, the program "iPhoto" is automatically started.